



電圧を可変しながら、電流/抵抗を測定する方法。

		赤枠の位 このボタン	:置にカーソ /をクリックし	ルを置いっ レます。	ζ.	
	355 10€7515-5 55 M 100 1 1 9 • •	Book1 - Microse	(Excel 数: 編末 7) 回 し (~ @ -	「小師新子 IP HELALICE FAUNOLEHO 「「「新子単位」」「AUNOLEHO 「「「「「「」」」「「「新子単位」」 「「「」」」 「「」」 「「」」 「」 「」 「」 「」 「」 「」 「」 「」 「」 「」 」 「 「」 「 「」 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「 「
A 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	B 100 110 120 130 140 150 160 170 180 190 200 210 220 230 240 250 260 270	c [電圧出 入力し	コカリストな ます。	F を事前に	c	日午時間 2.20ロール 日午時朝入力 □ 外部測定器名使用 図 経過時間入力 N ● 外部測定器名使用 図 経過時間入力 N ● 新部測定器名使用 図 経過時間入力 N ● 新部測定器名使用 図 経過時間入力 N
37×F 2	a na sa n			I II 154% (-)		•

外部測定器(マルチメータ等)の設定方法

外部測定器とはGP-IBでパソコンと接続されている必要があります。(下図)

外部測定器から送られてくるデータのフォーマットは、ASCIIであり、複数のデータの場合(Max10個)、データ間はコンマで区切られている必要があります。 注)全ての測定器との通信を保証するものではありません。



W32-64875の場合接続例 (W32-6487は、6485/6487が1台、 外部測定器が1台だけが接続可能です。)